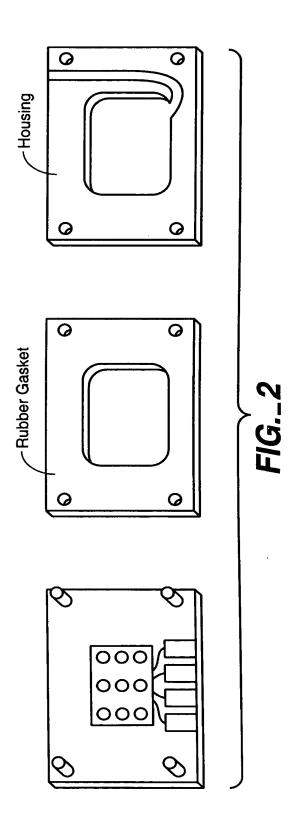
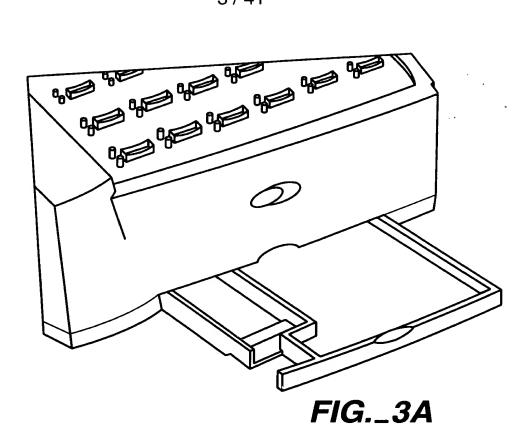
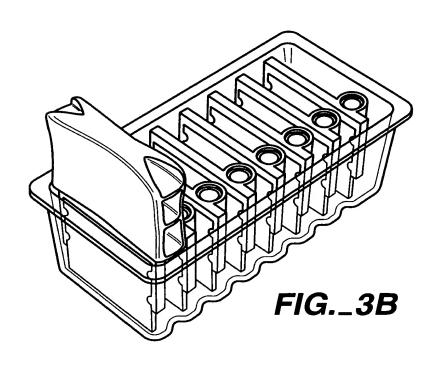


FIG._1

2/41










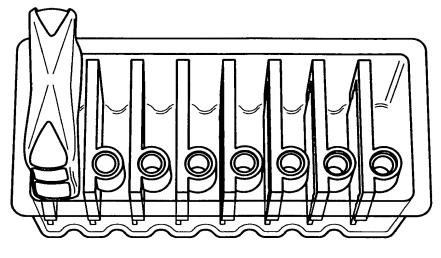


FIG._3C

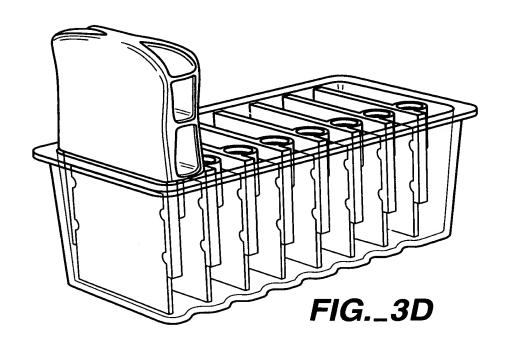

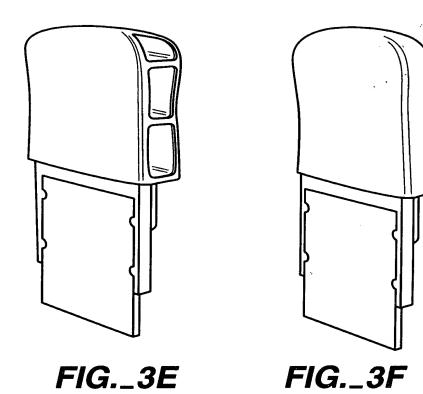

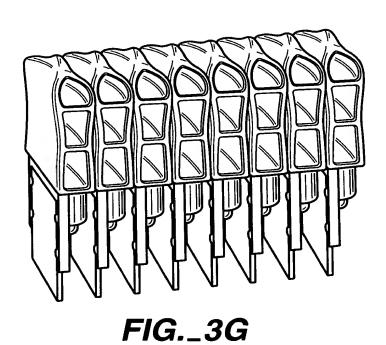

6 / 41

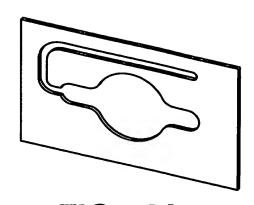


FIG._4A

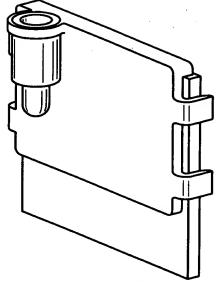


FIG._4B

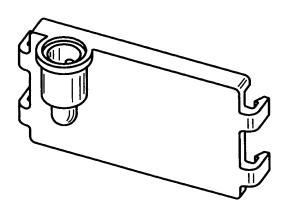


FIG._4C

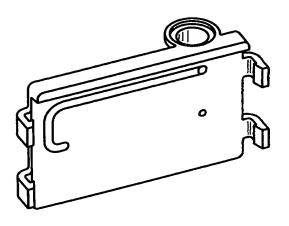
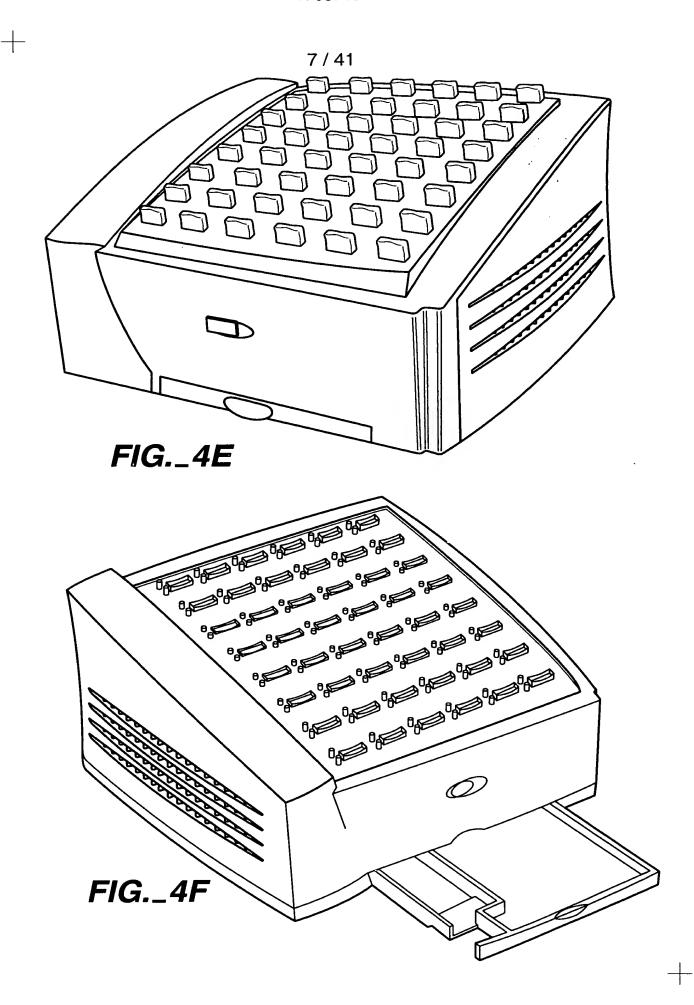
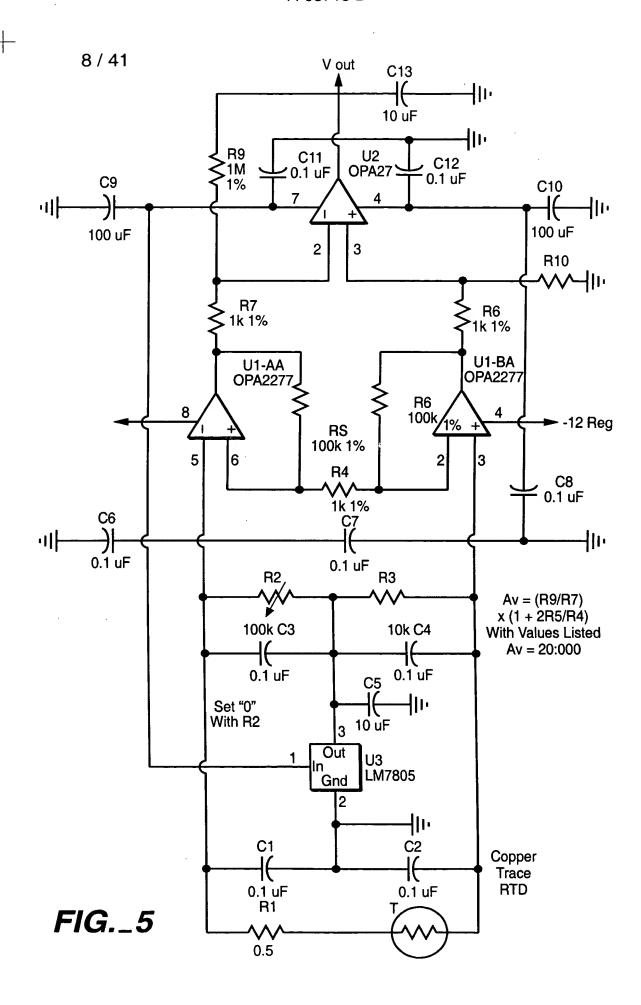


FIG._4D







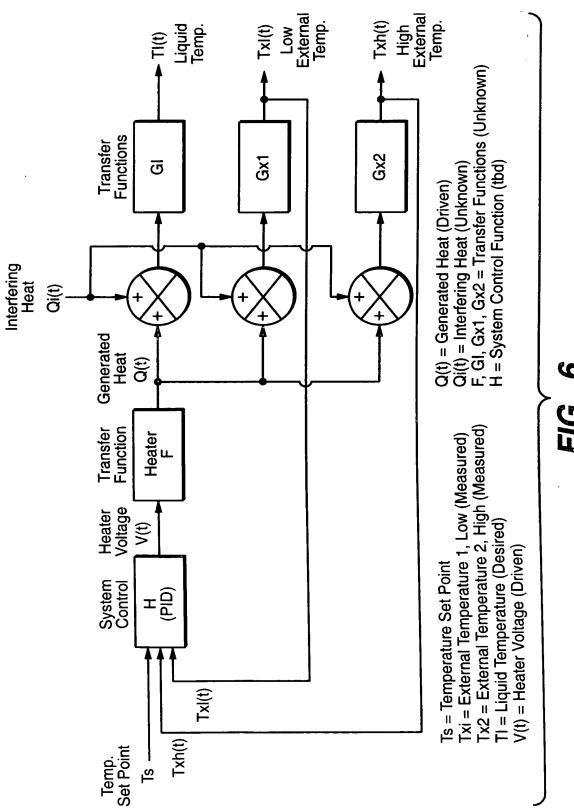


FIG._6

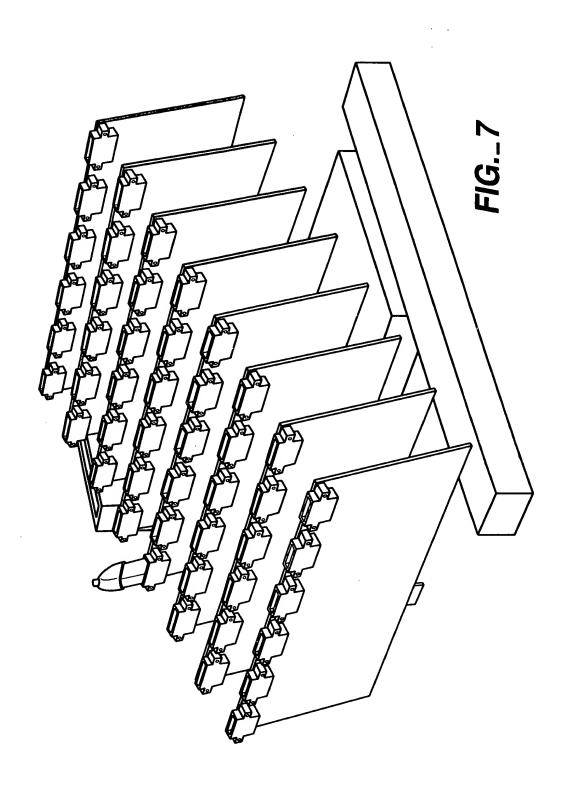


+-


11 / 41

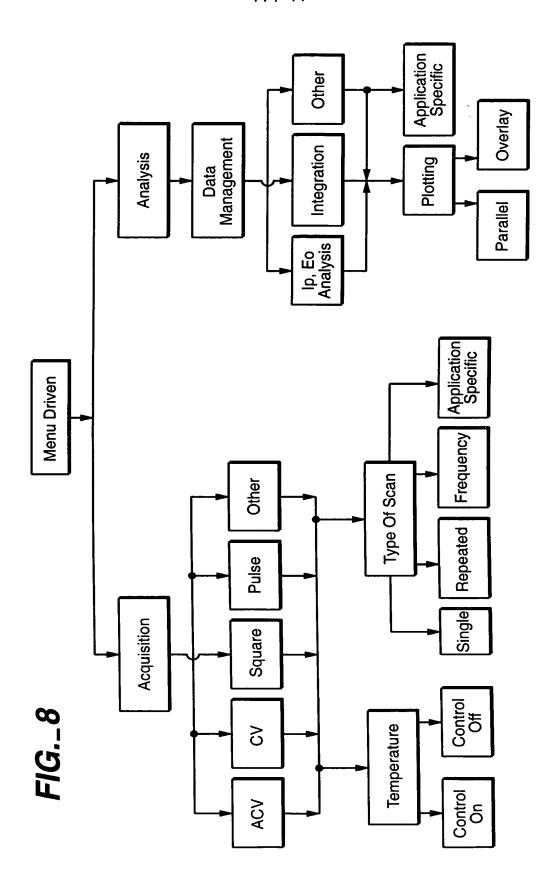


 \perp

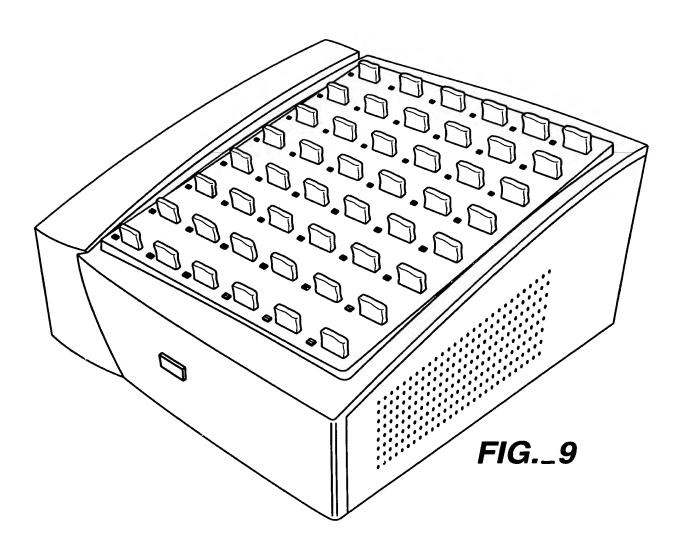



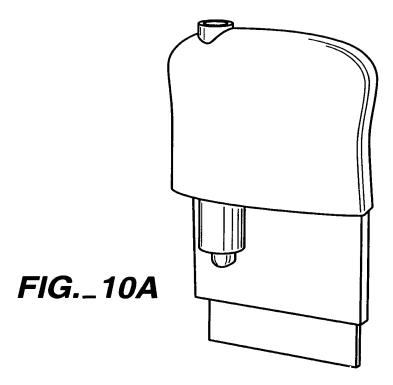

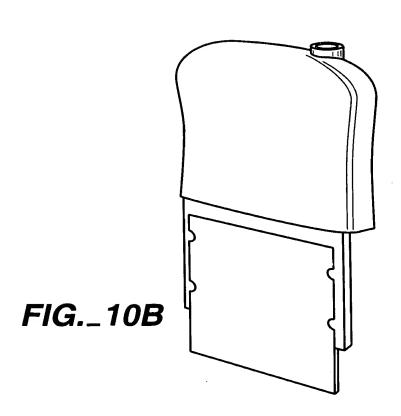

- Bar coded "reference" sheet, stored in tray under unit, with bar coded protocols, bar coded well and slot id's, bar coded commands (e.g. "cancel", "done", etc.)
- Standard bar code wand (preferably with built-in decoder), housed in the tray (hence hidden when not in use)
- Serial (RS-232/485) interface (preferred), or "keyboard wedge"
- Multi-code support (Code 39, Code 128, etc.)
- Bar code on chip carrier (1 code per "8 pack"), identifying test, batch, etc.
 - Peel off labels, with same code as on carrier, with each "8 pack"

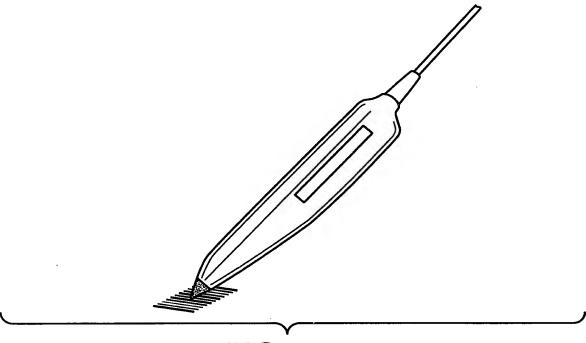


FIG._11

- Bar code usage scenario
 - User fills "8-pack" (all 8, or partially) from a 96 well plate, or from individual sample containers (PCR tubes, vaccutainers, etc.)
 - Pull out tray (with bar code reference sheet) and grab wand
 - Scan "start" code
 - Scan protocol code from sheet (will remain in effect until "done" is scanned)
 - Scan chip code from carrier (will remain in effect until "done" is scanned)
 - For each cartridge, user will
 - □ insert the cartridge in an open slot. Unit senses new chip automatically
 - □ scan the sample ID by either
 - scanning 96 well plate bar code from plate and well code from sheet
 - or scanning unique sample ID from container
 - or scanning "no ID" from reference sheet
 - Scan "done" code. The protocol can' now be started on these cartridges

FIG._12

- Bar code concept benefits
 - No keyboard entry (all-routine setup can be entered via bar coding)
 - All routine entries accomplished while in front of unit (no going back & forth between PC & Hydra)
 - All bar code entries done from small, flat surface in front of unit
 - No need to label each chip or each slot (which would compromise appearance)
 - Uses small unobtrusive bar code wand, hidden when not in use
 - Is flexible with respect to sample container (tube, 96 well plate, etc.), chip usage (by row of 8, or by individual chip), and lab bar coding method

FIG._13



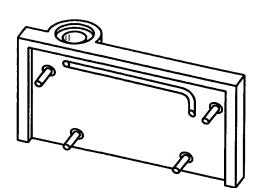


FIG._14B

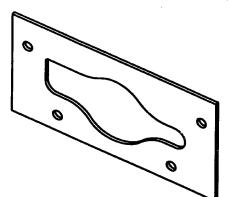


FIG._14C


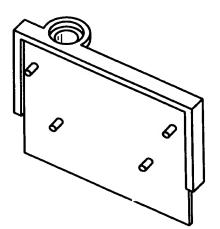


FIG._14D

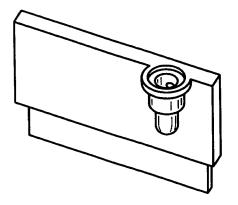

17 / 41

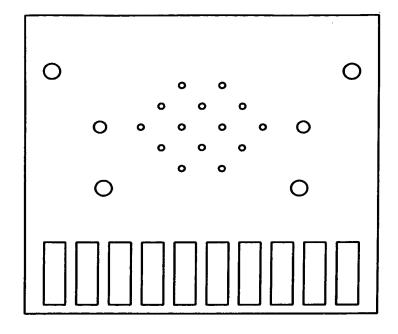
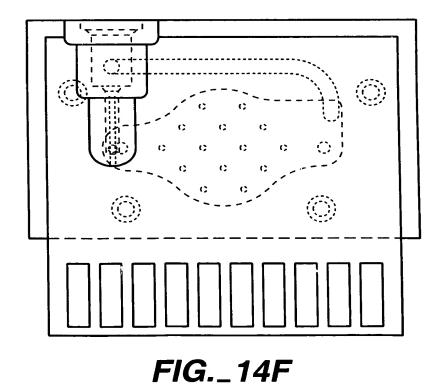


FIG._14E





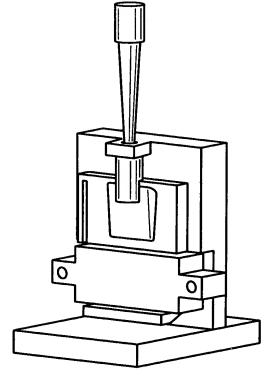


FIG._15A

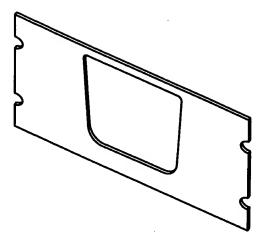


FIG._15B

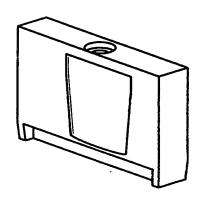


FIG._15C

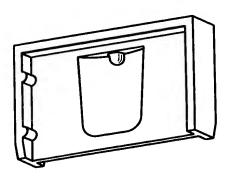


FIG._15D

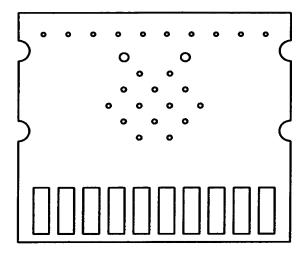


FIG._15E



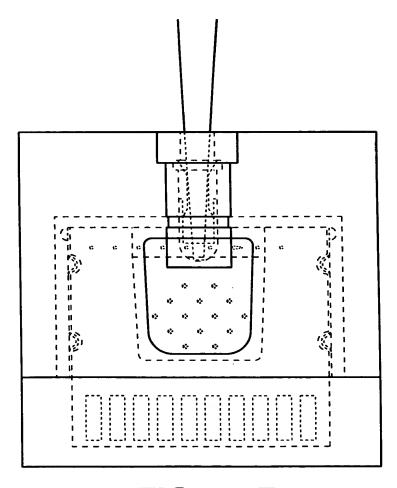


FIG._15F


A Sine Wave And Its Corresponding Vector Notation

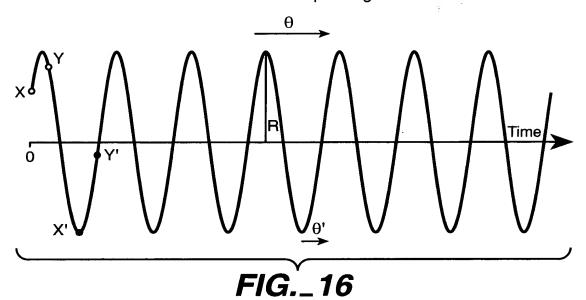


Polar Coordinates



Cartesian Coordinates

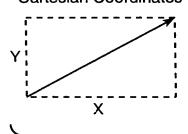

Polar Coordinates'



Cartesian Coordinates'








FIG._17

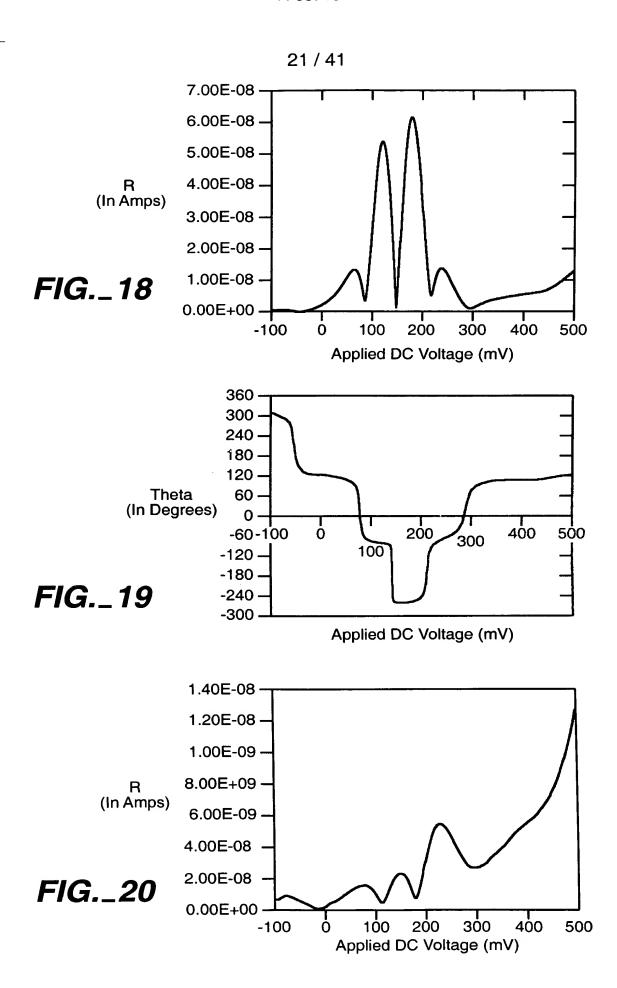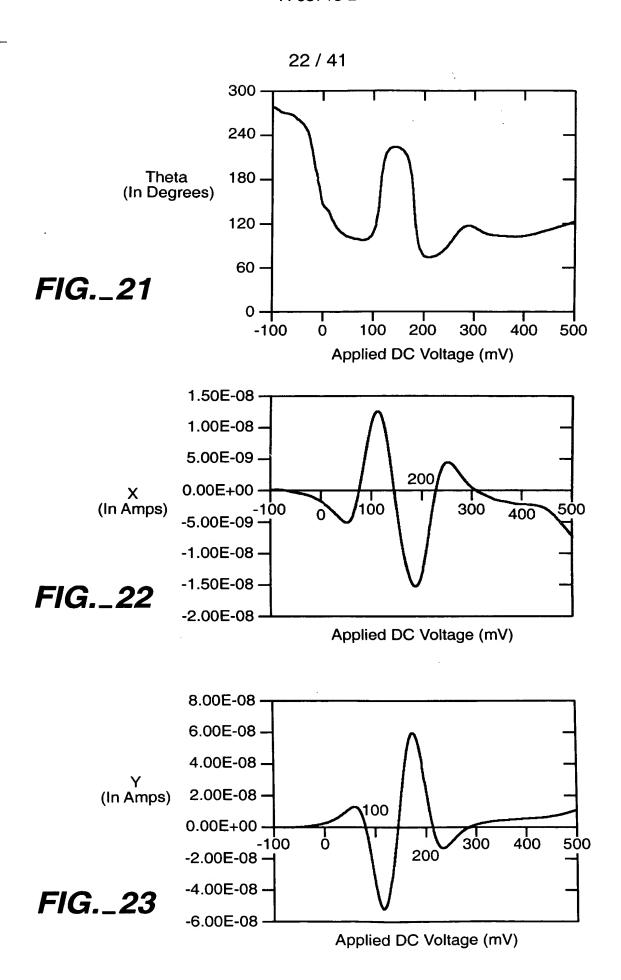

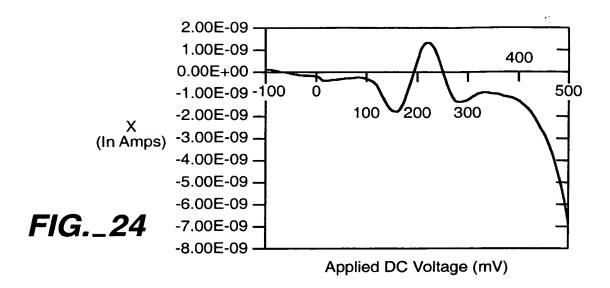

23 / 41



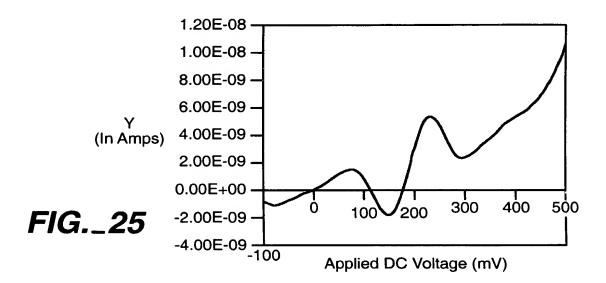

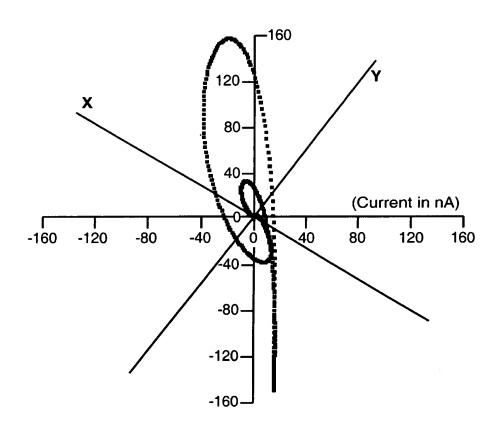


FIG._26

25 / 41

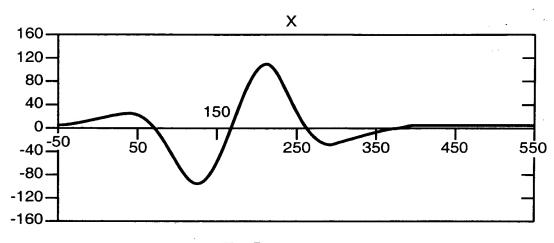


FIG._27

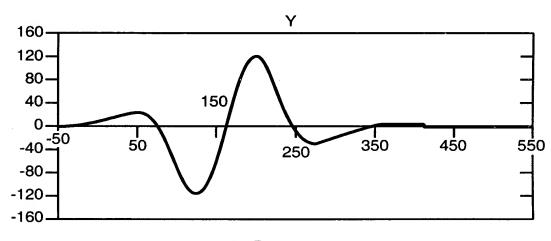


FIG._28

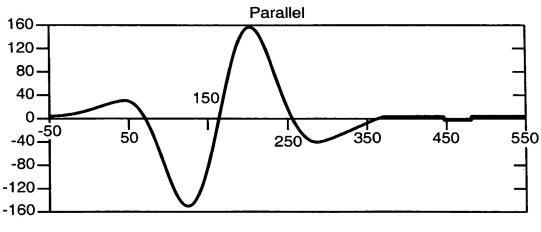


FIG._29







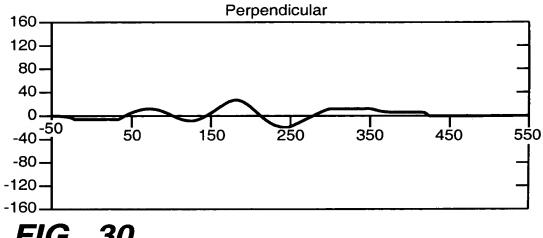



FIG._30

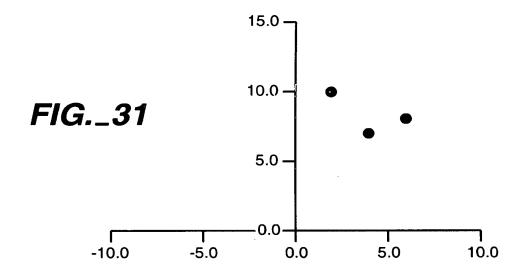


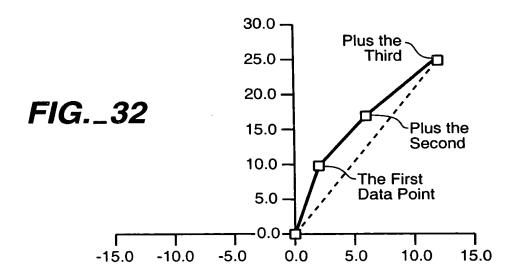


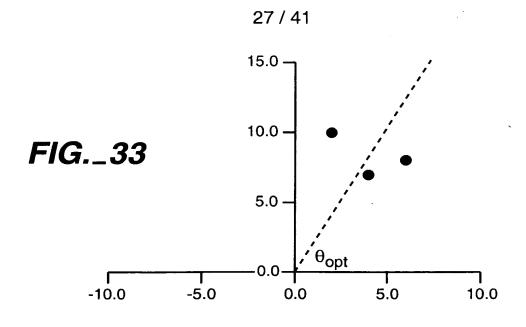


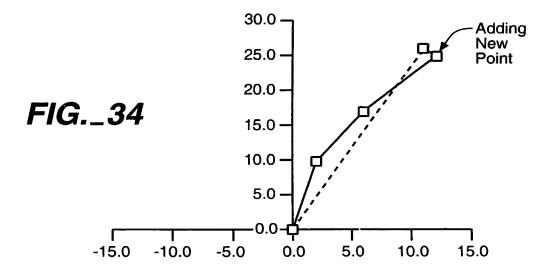


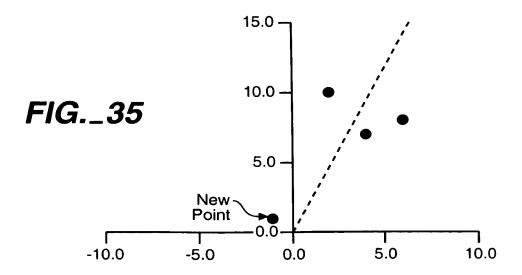


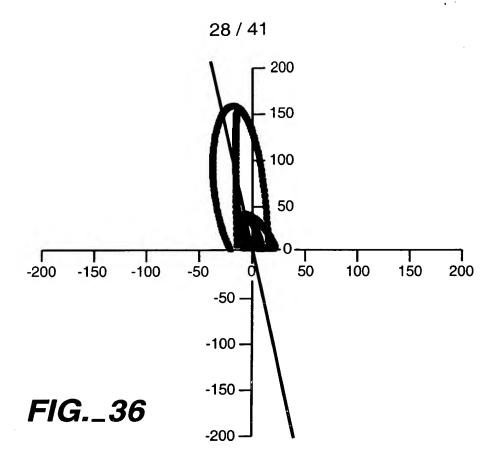


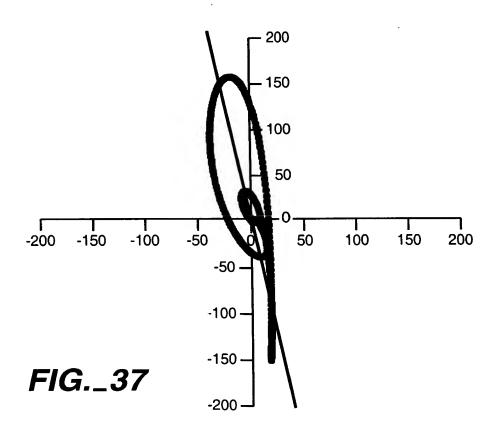


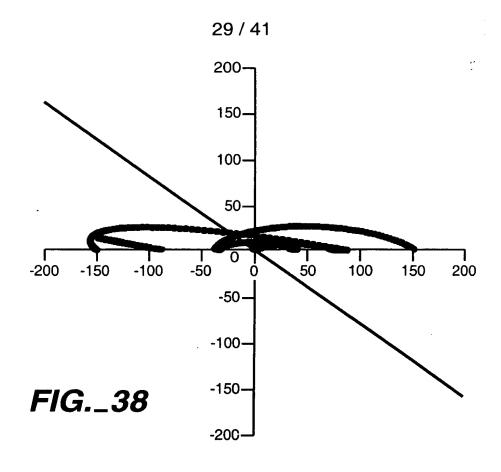

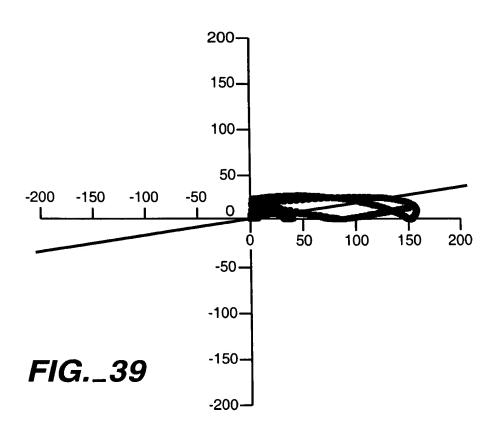

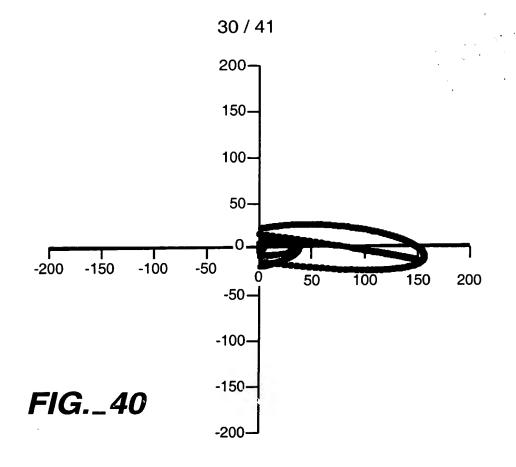

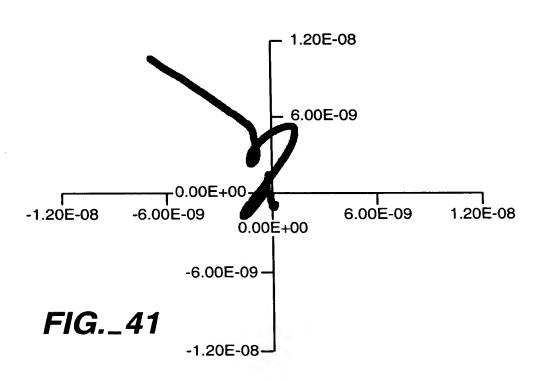

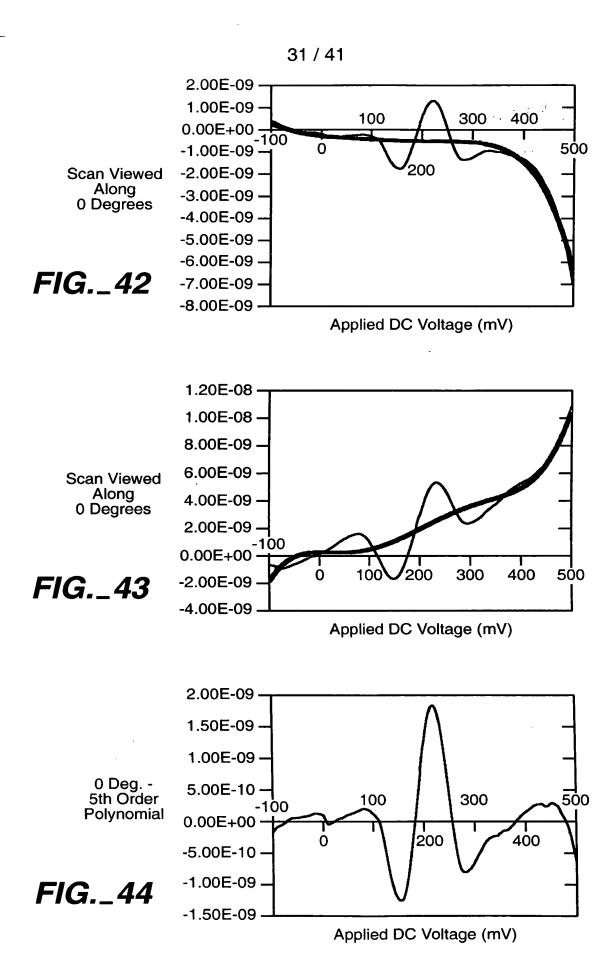

32 / 41

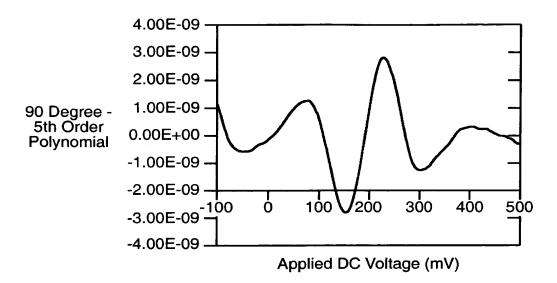


FIG._45


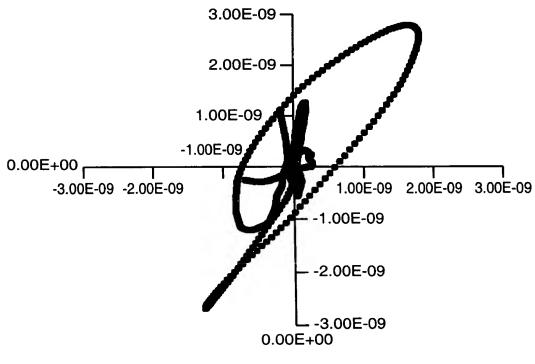


FIG._46



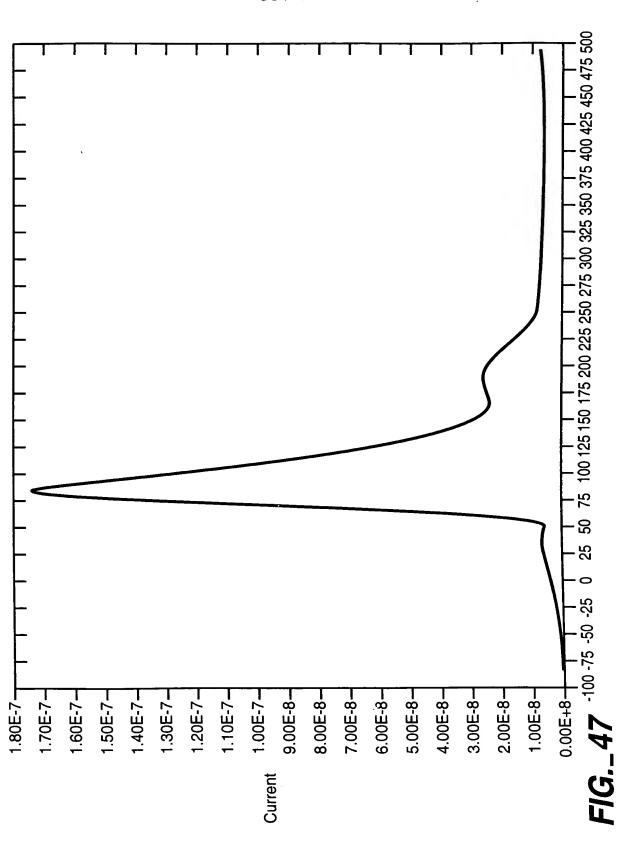

34 / 41


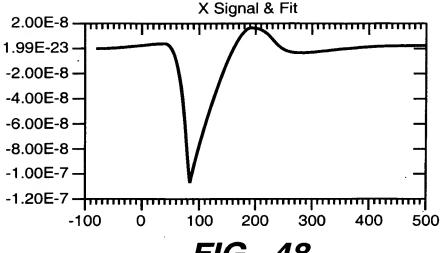


FIG._48

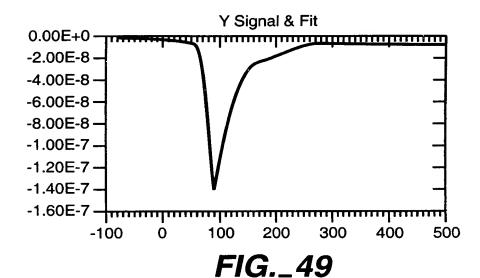

Y (at θ_{opt}) 2.0E-08 200 0.0E + 00100 -2.0E-08 -100 300 400 **500** -5.0E-08 -Current -6.0E-08 Polynomial Fit (A) -8.0E-08 -1.0E-07 -1.2E-07 -1.4E-07 -1.6E-07 DC Voltage (mV)

FIG._50




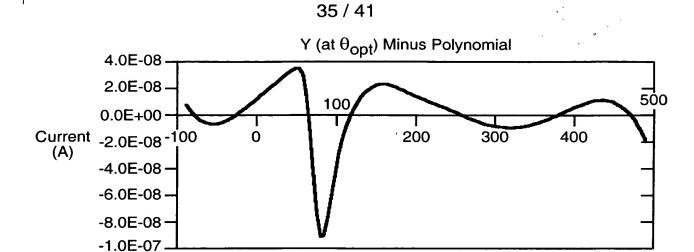


FIG._51

DC Voltage (mV)

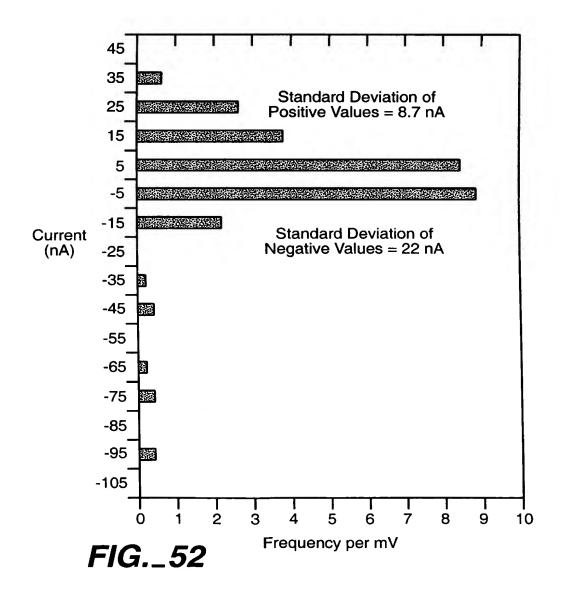

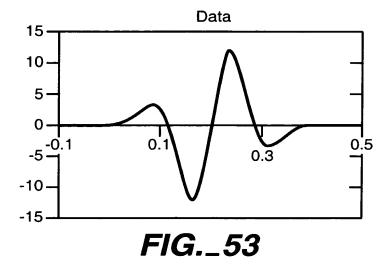

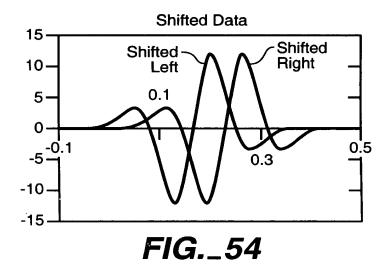

37 / 41

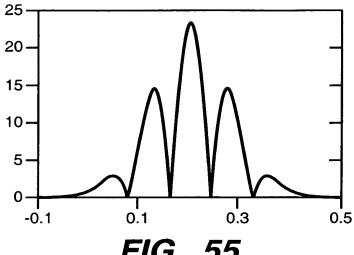


FIG._55

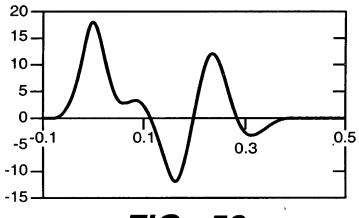
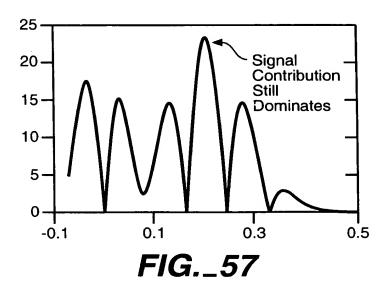
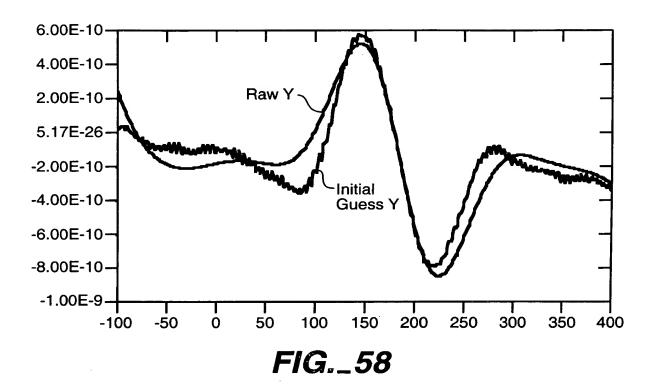
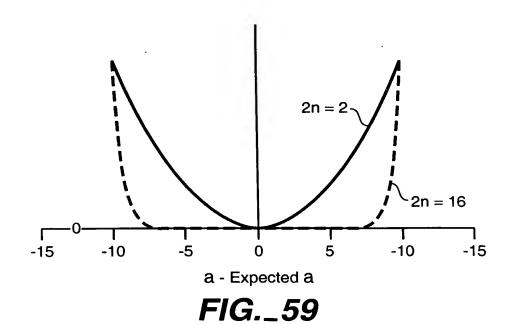
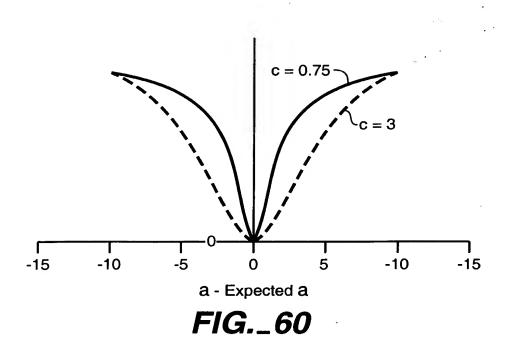


FIG._56









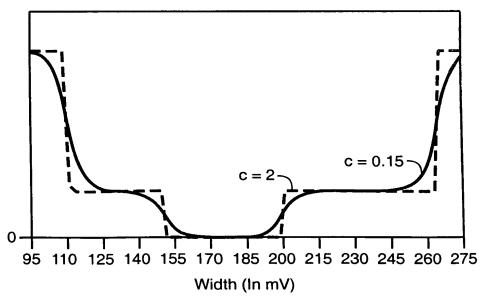


FIG._61

40 / 41


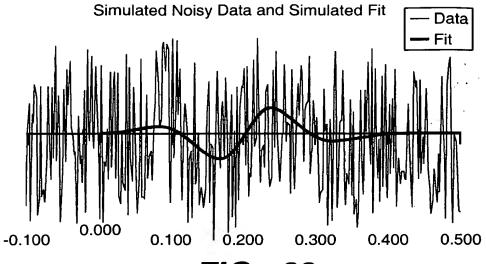


FIG._62



1.2E-11 1.0E-11— 8.0E-12— 4.0E-12— 2.0E-12— 7.6E-14— -100 0 100 200 300 400 500 **FIG._64**

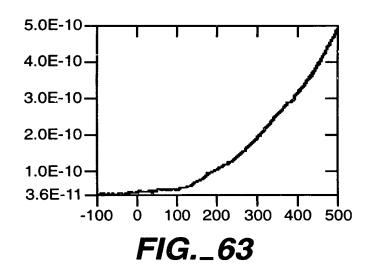